



LICENSED ELECTRICIAN ONLY

Isolate supply, secure against reconnection and test for dead before starting.

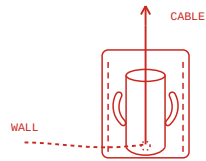


1 FEED CABLE

Route cable through the rear entry and up through the socket opening. Leave enough length for assembly.

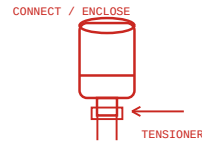


2 WIRE SOCKET

Connect with correct polarity. Secure the two-part cable tensioner; close the housing to enclose terminals.

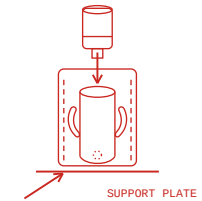


3 SEAT SOCKET

Support the unmounted plate by hand. Slide socket fully into its holder. Do not pinch or strain cable.

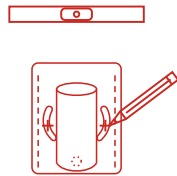


4 POSITION AND MARK

Hold socket upwards; allow shade clearance above. Level the plate and mark one point in each curved slot.

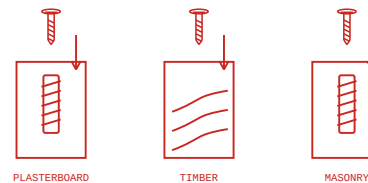


5 FIT ANCHORS

Move assembly clear without cable strain. Check for hidden services. Use fixings suited to the wall and load.

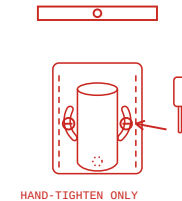


6 MOUNT AND LEVEL

Keep cable clear behind plate. Fit screws loosely, level, then hand-tighten. Do not distort the plate.

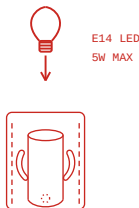


7 FIT BULB

Gently screw in the supplied E14 LED bulb: 4W, 2700K. Do not overtighten.

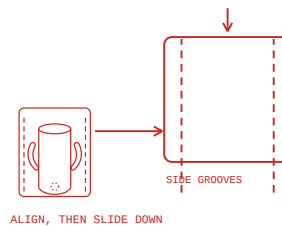

8 FIT SHADE

Align shade with the mounting plate's side grooves. Slide down until fully seated and secure. Do not force.

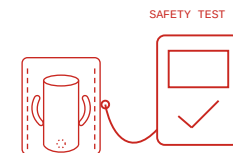

9 CHECK AND TEST

Check all parts are secure. Complete electrical safety tests before restoring power and checking operation.

INDOOR DRY LOCATIONS ONLY. NOT FOR BATHROOMS OR OUTDOORS.

E14 LED only / Maximum 5W / Nylon mounting plate / Hand-tighten screws only; no powered driver.

BULB REPLACEMENT: Switch off and allow to cool. Slide shade upwards to remove. Replace with E14 LED, maximum 5W.